


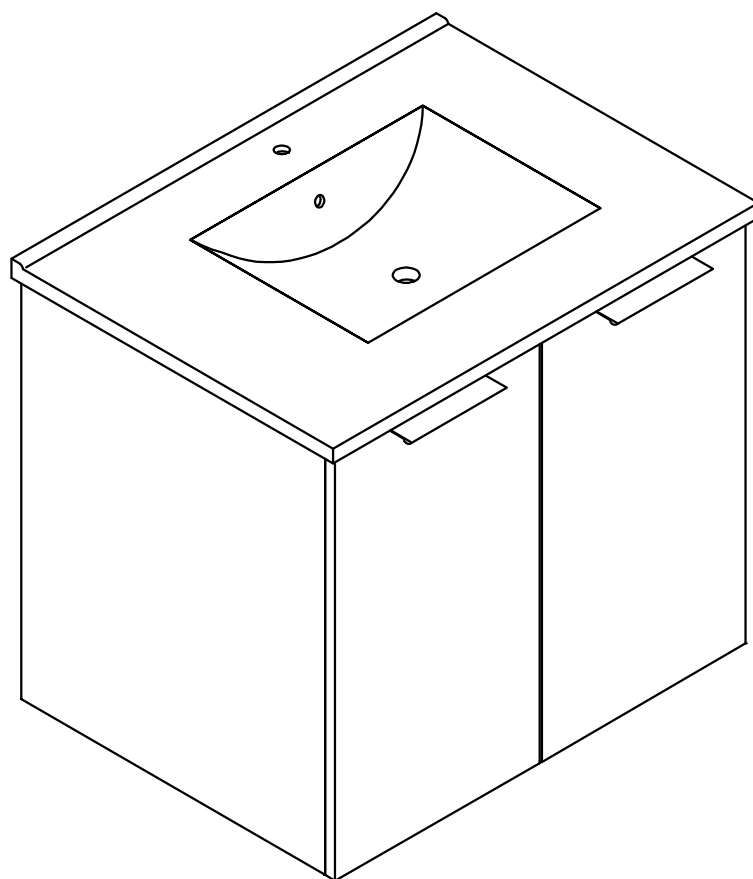














# MANUAL DE INSTRUCCIONES

BT2487-BT2488





# MUEBLE DE BAÑO

Serie Venus

<b>A</b> × 15 	<b>B</b> × 15 	<b>C</b> × 10 	<b>D</b> × 4 	<b>E</b> × 28  M4X14mm	<b>F</b> × 2  F-1 F-2	<b>G</b> × 6  Ø8x35mm	<b>H</b> × 6  M5x50mm
<b>I</b> × 2 	<b>J</b> × 4  M4X25mm	<b>K</b> × 15 	<b>L</b> × 4 	<b>M</b> × 2 	<b>N</b> × 2  Ø10x42mm	<b>O</b> × 2  M6x60mm	

Herramientas de montaje

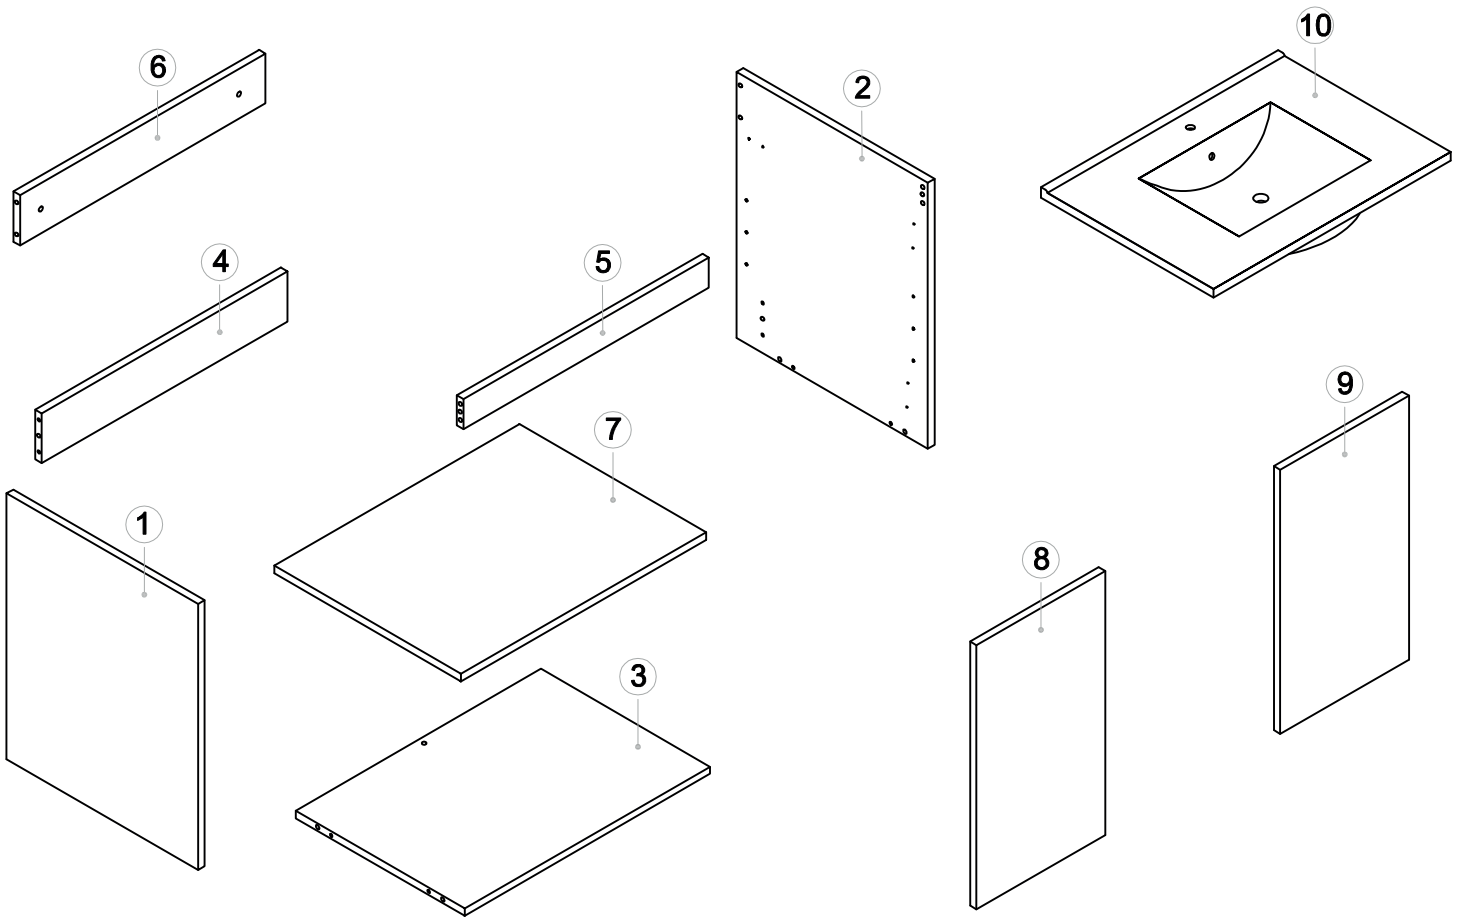
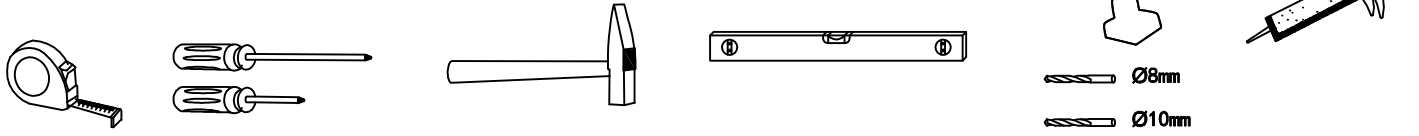


1




B × 1



C × 10

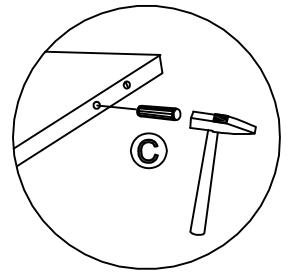

Atención: No empujar demasiado los tacos de madera

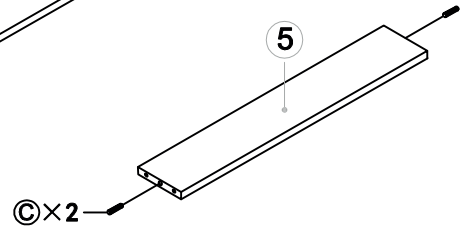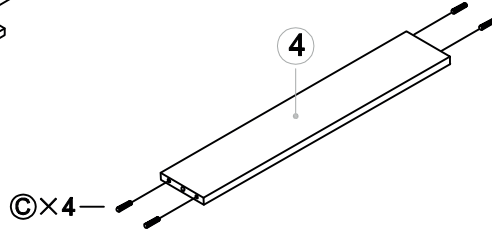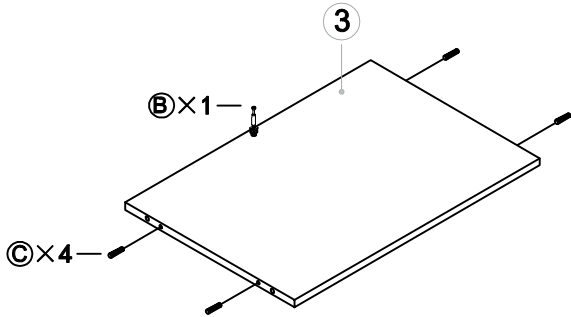

2

B × 14



F × 2





F-1

F-2



J × 4



M4X25mm

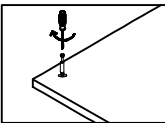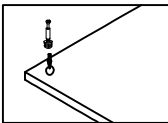






Atención: No apretar demasiado los tornillos

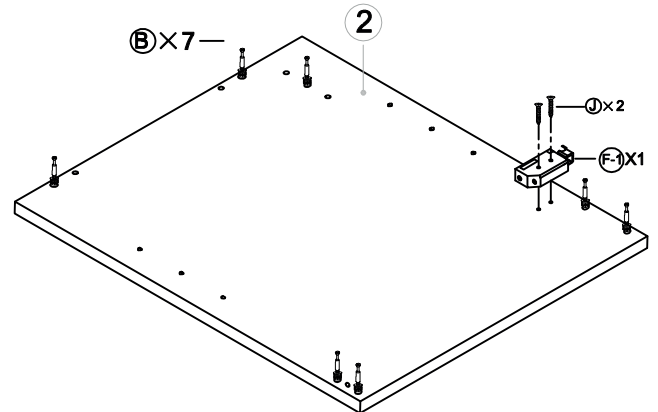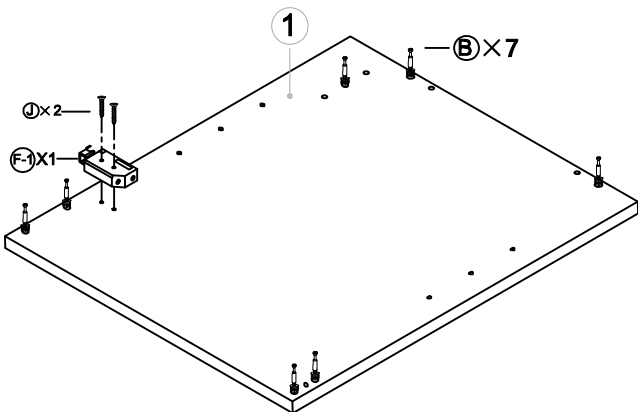

3

A × 15

K × 15

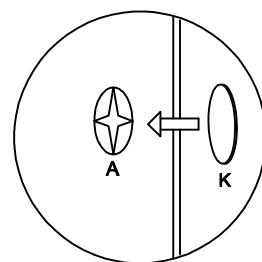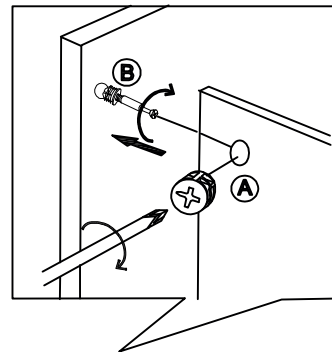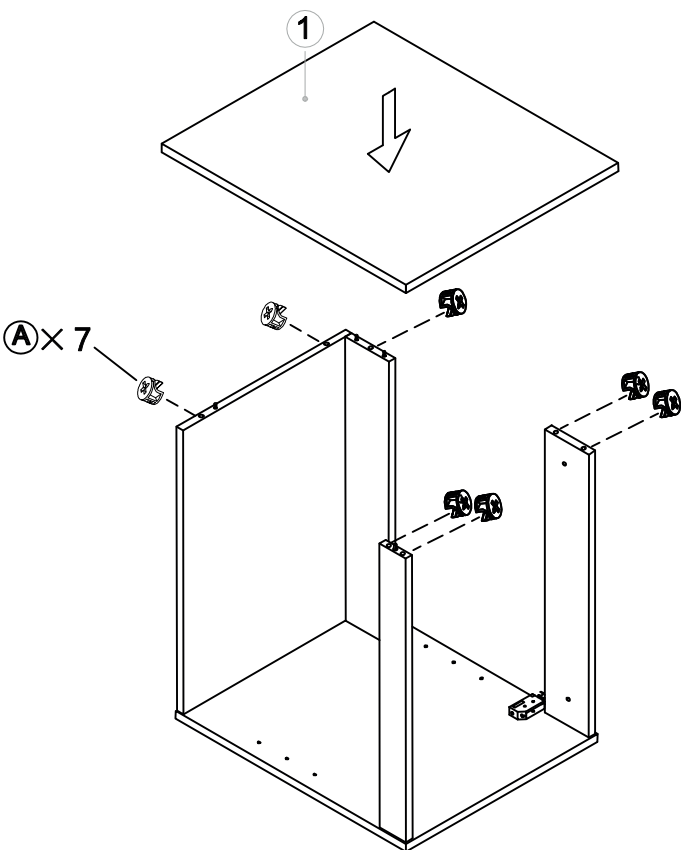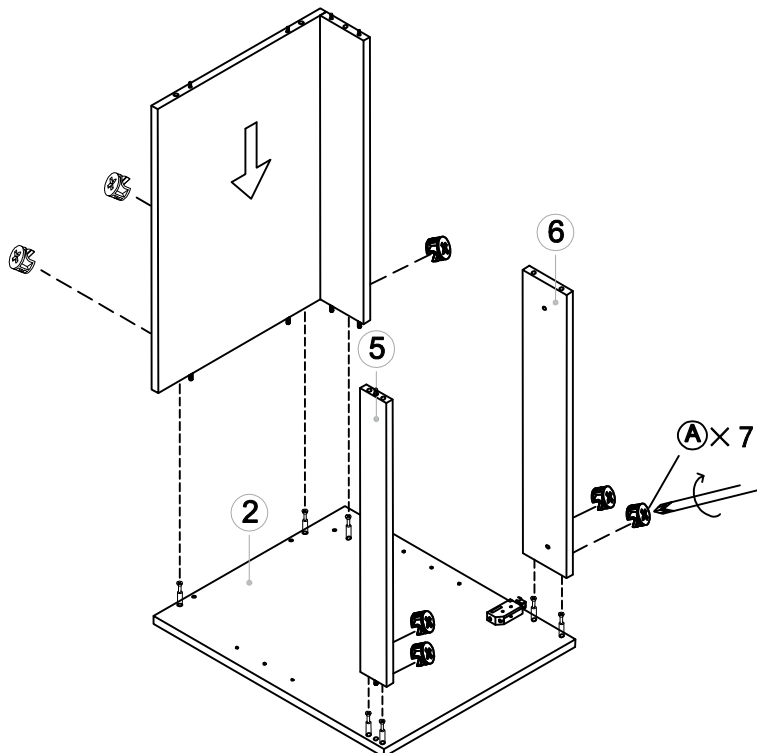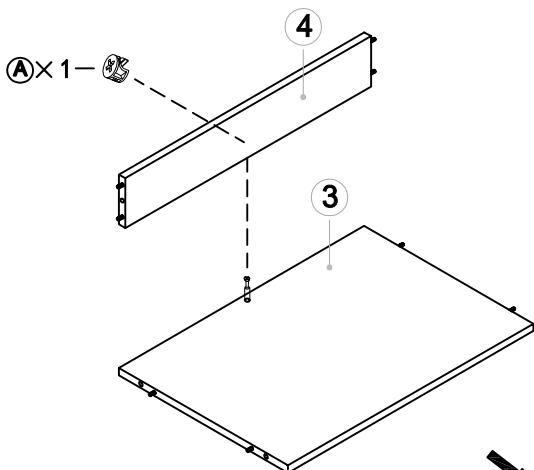

4




E × 8



D × 4



L × 4



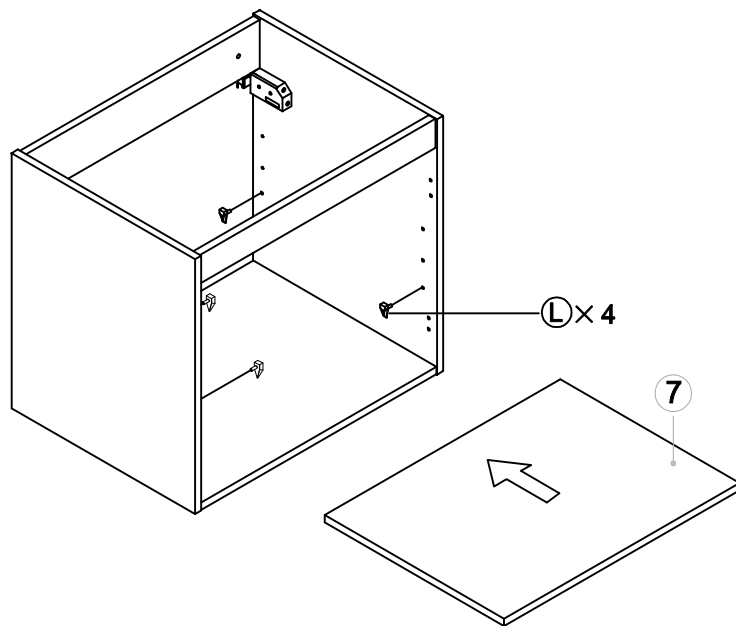
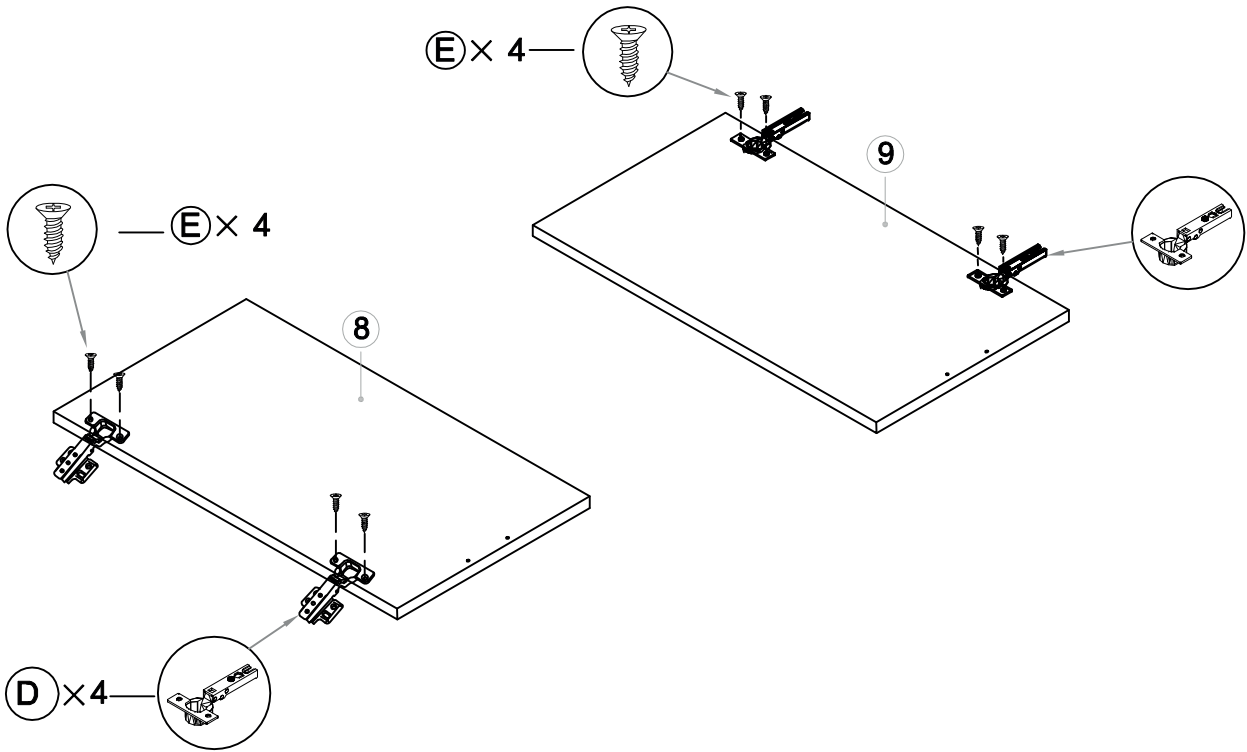
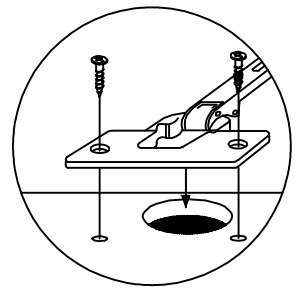


5

5





E × 20

M × 2

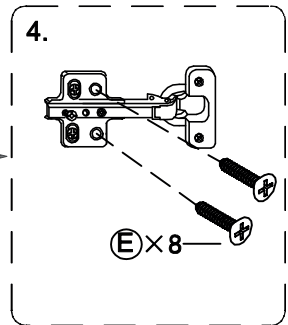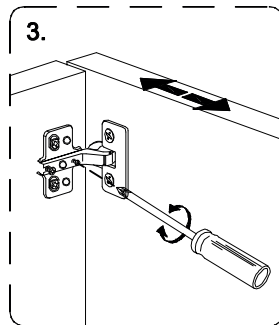
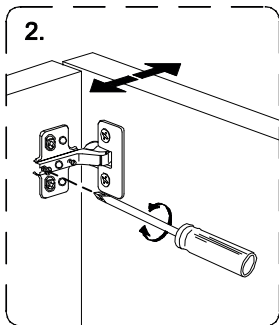
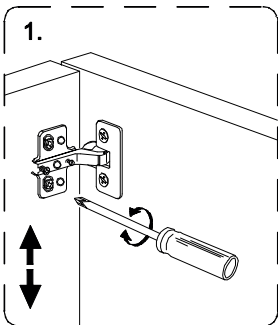
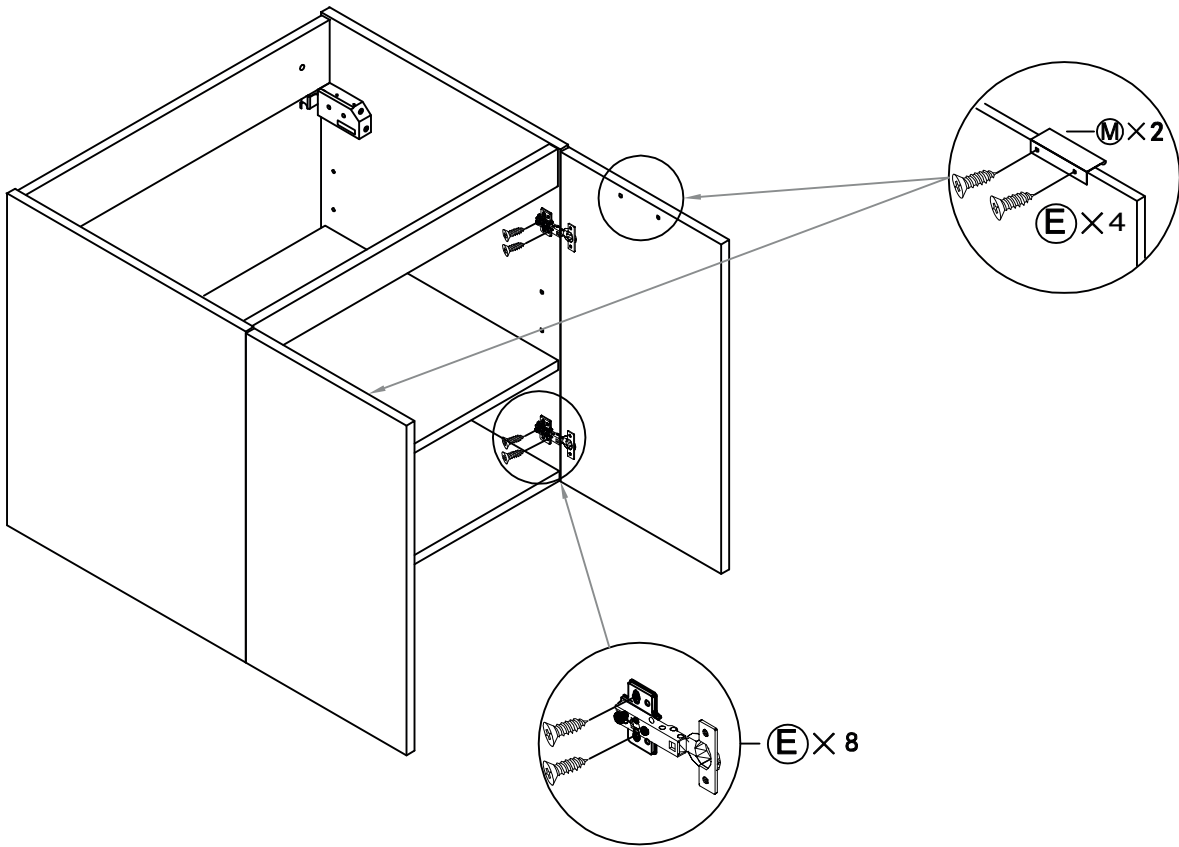


6

6

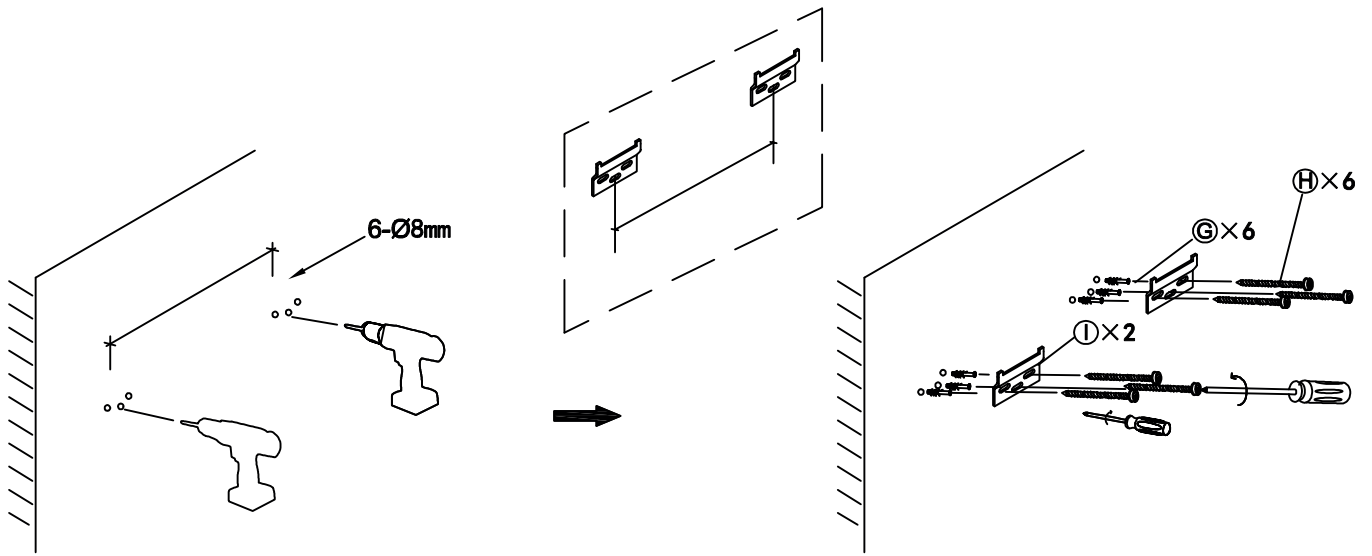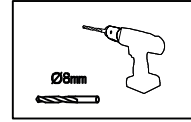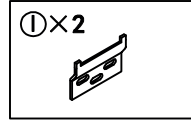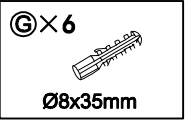


7

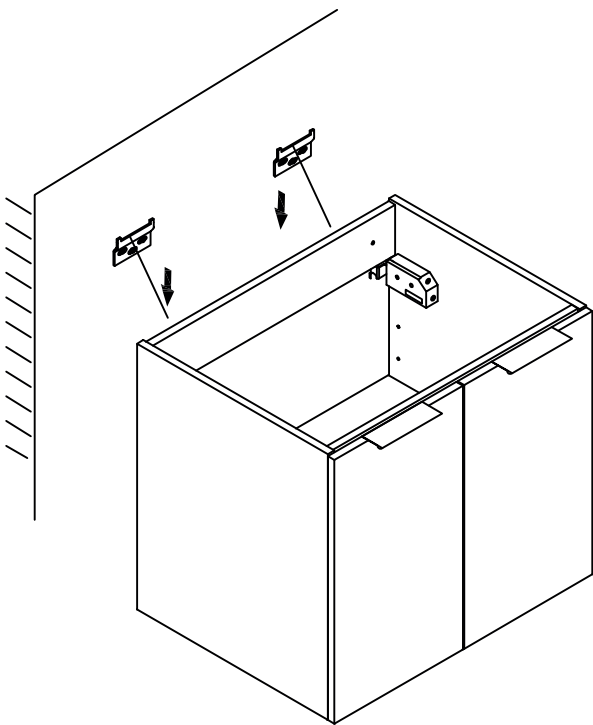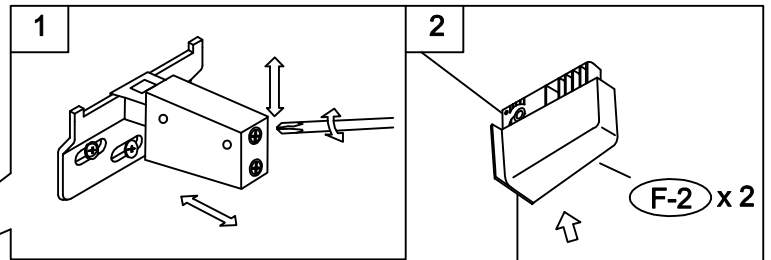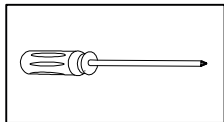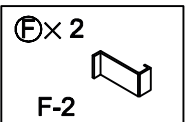


8

N × 2



O × 2

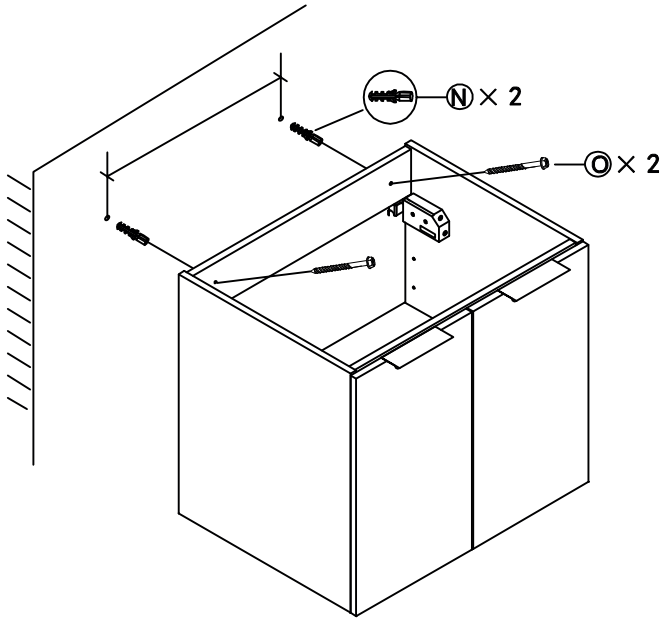

10

