


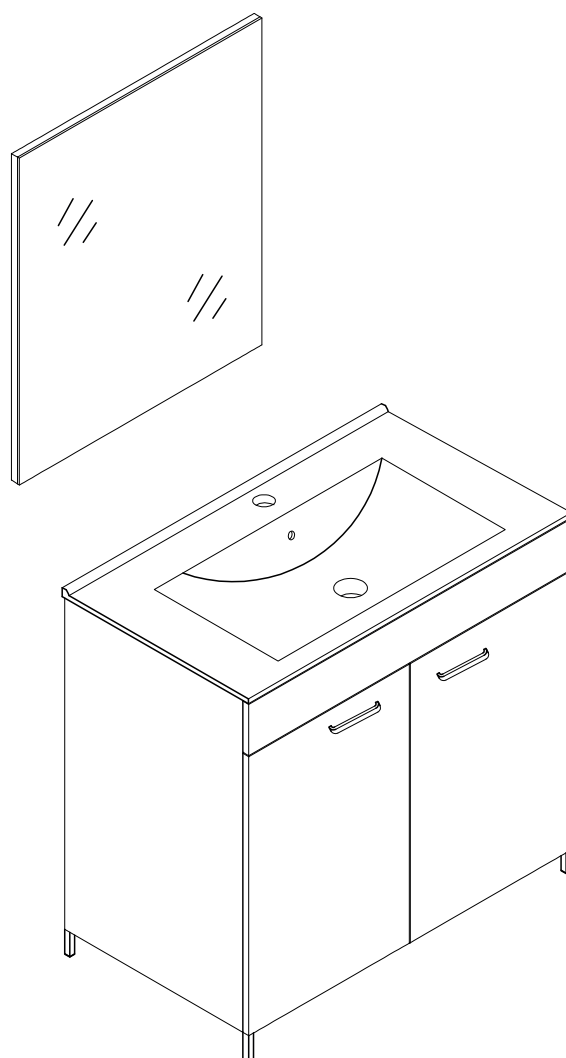














MANUAL DE INSTRUCCIONES

BT2708-BT2709





MUEBLE DE BAÑO

Serie Canis



A × 15 	B × 15 	C × 10 	D × 15 	E × 40  M4x14mm	F × 4 	G × 2  Ø10x42mm	H × 2  M6x60mm
J × 4 	K × 2  Ø8x35mm	L × 2  M5x50mm	M × 2 	N × 4  M4X18mm			

Herramientas de montaje



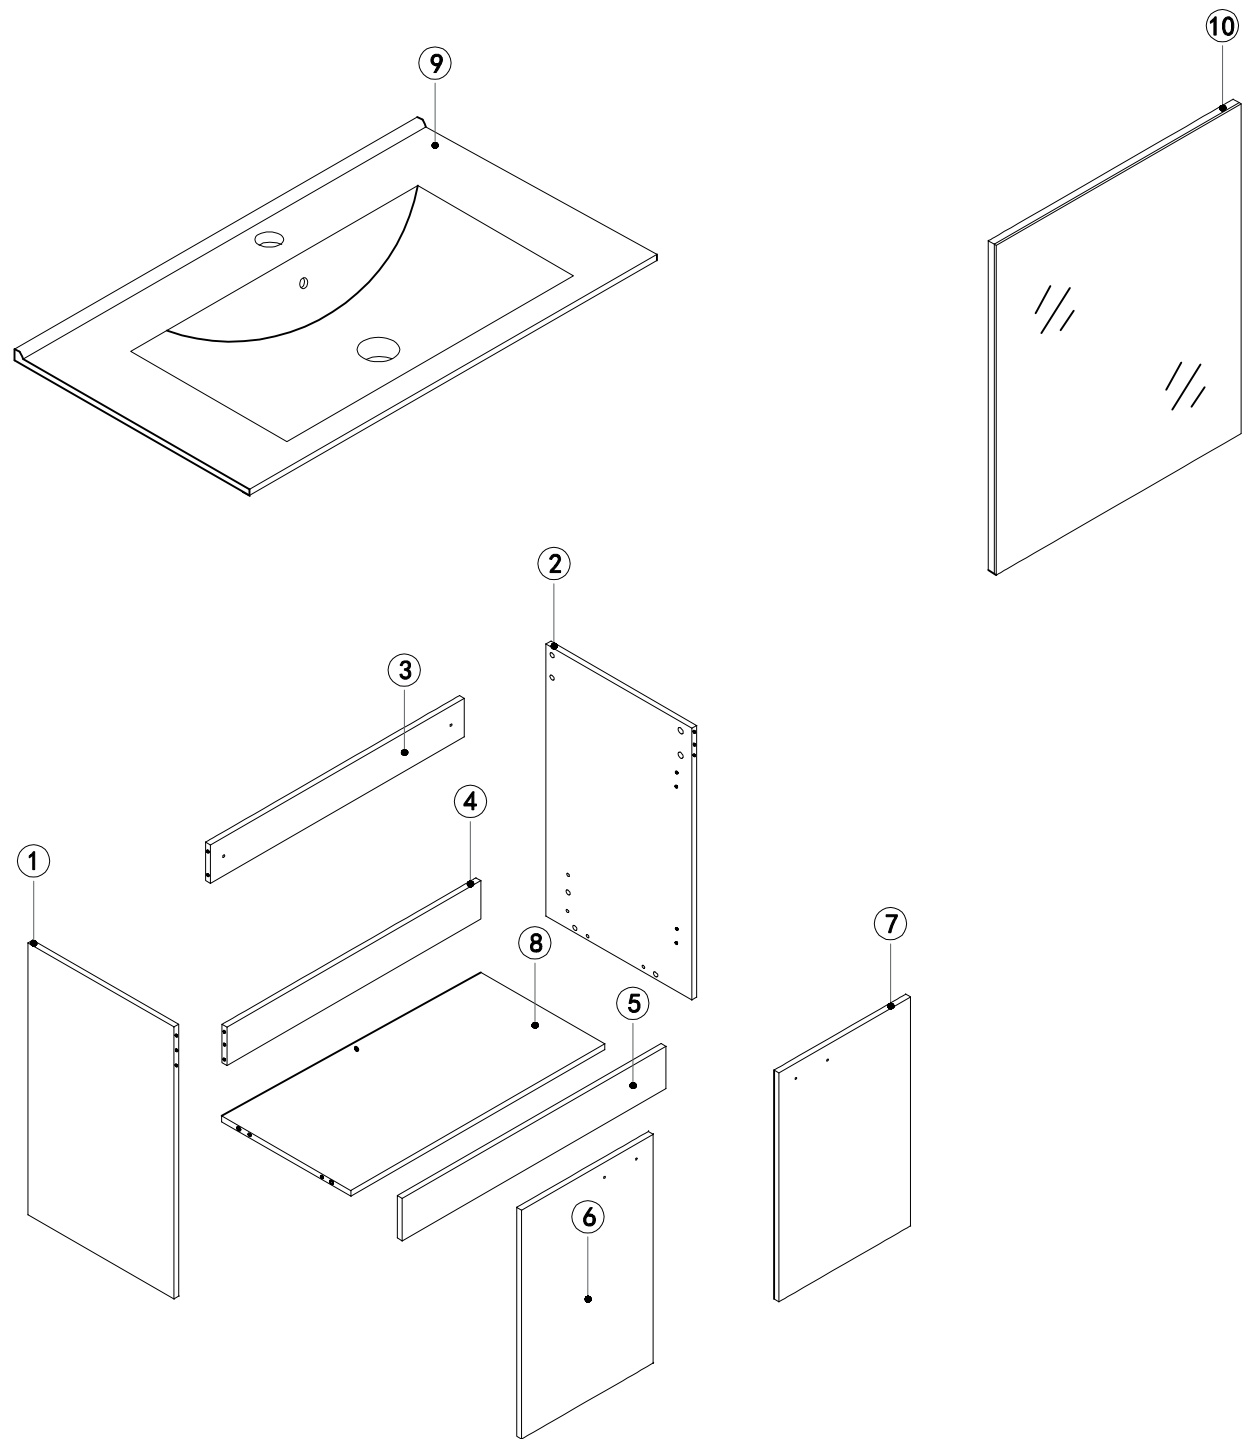
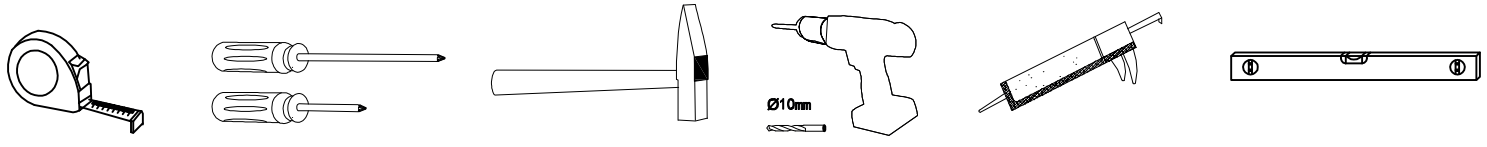


1

B × 15



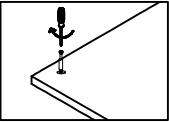
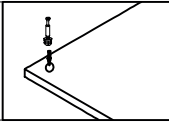


Atención: No apretar demasiado los tornillos





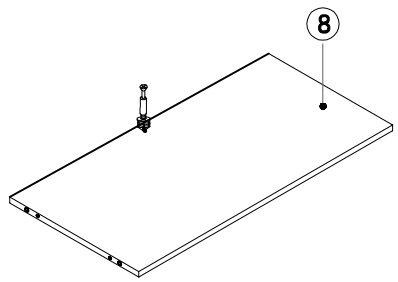
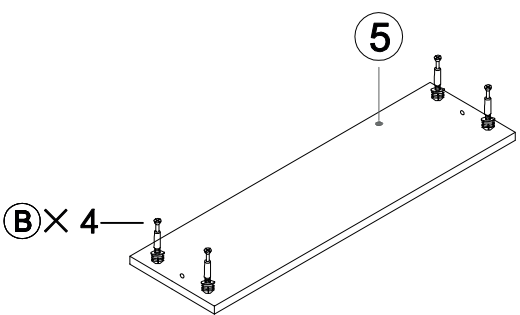
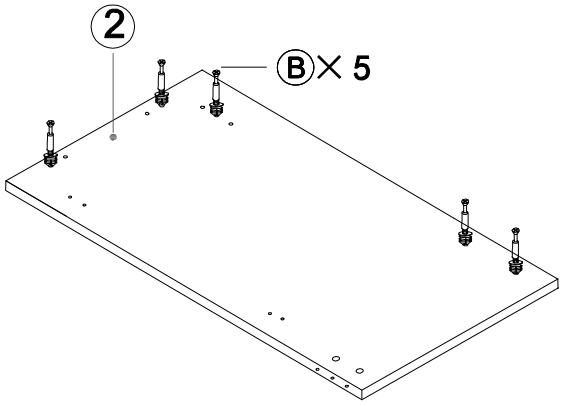
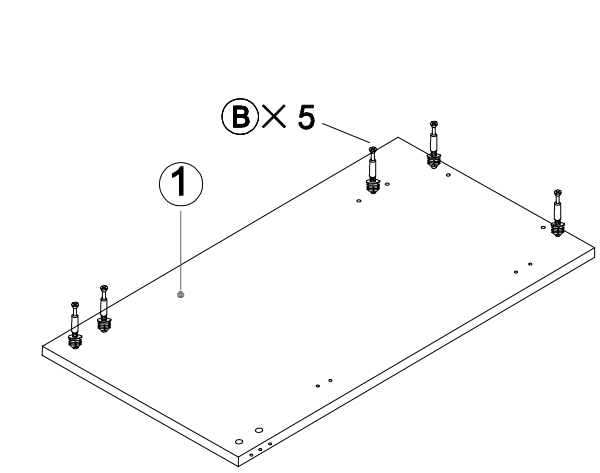


2

C × 10

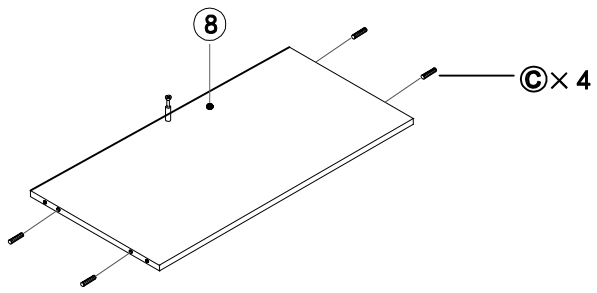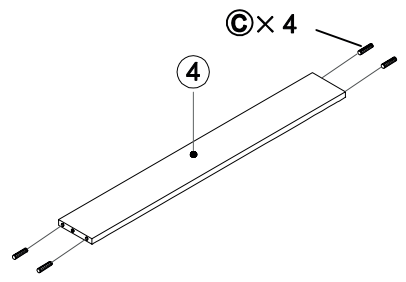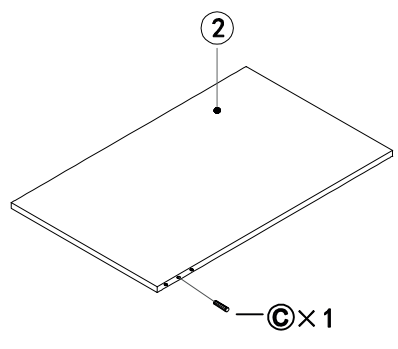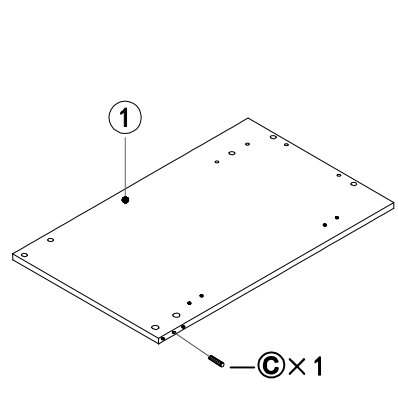

3

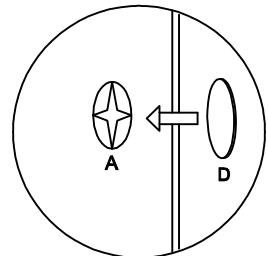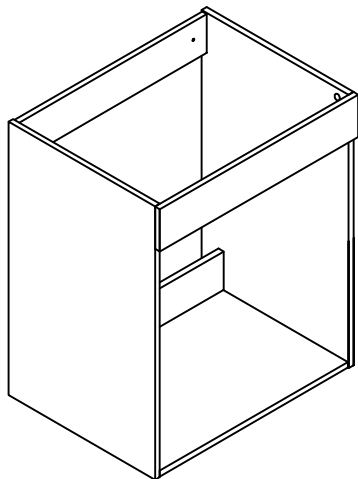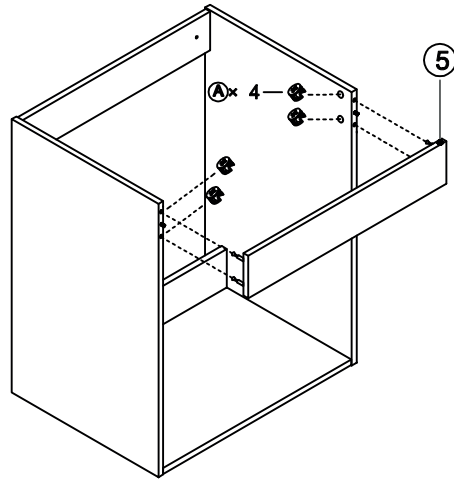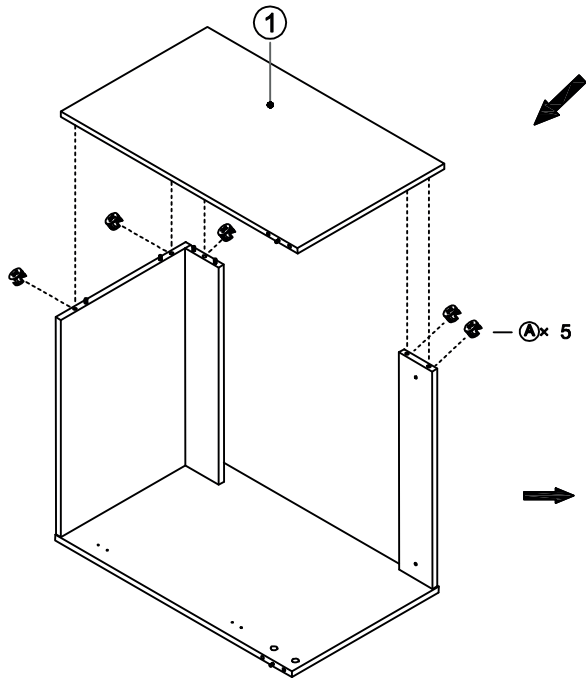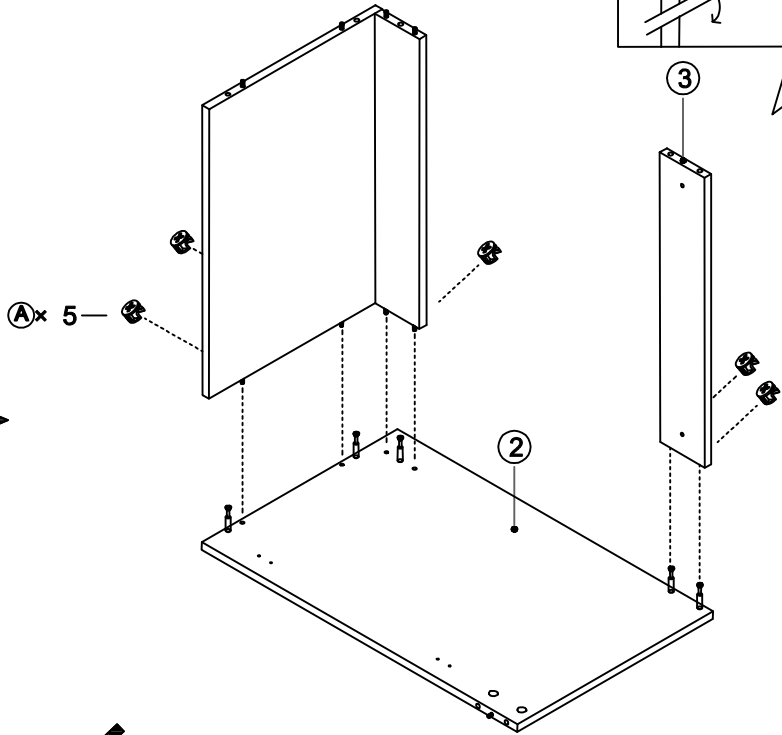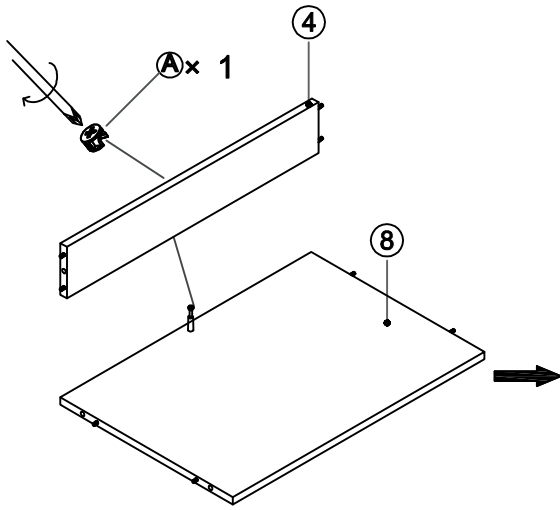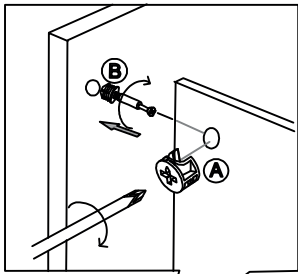

4

4

E × 24



J × 4





M × 2





N × 4




M4X18mm

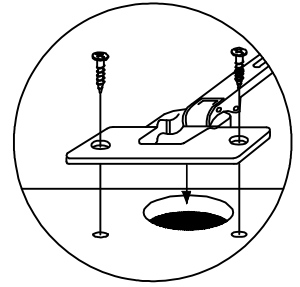

E × 8

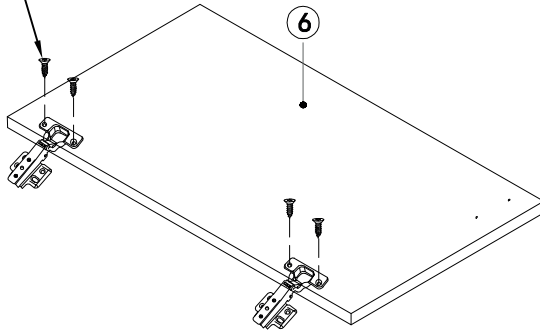


J × 2

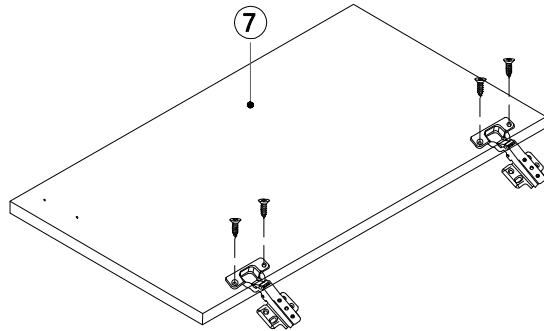

J × 2


180°

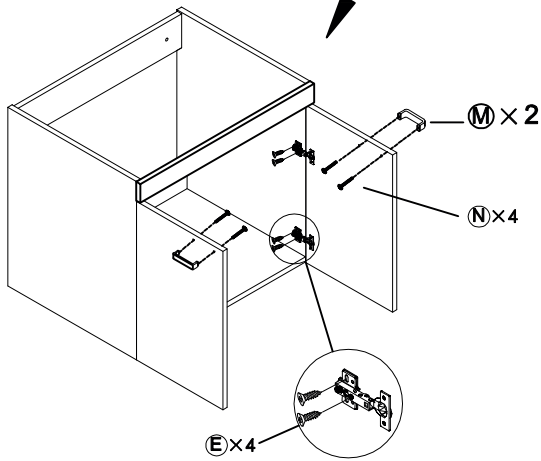





M × 2

N × 4

E × 4

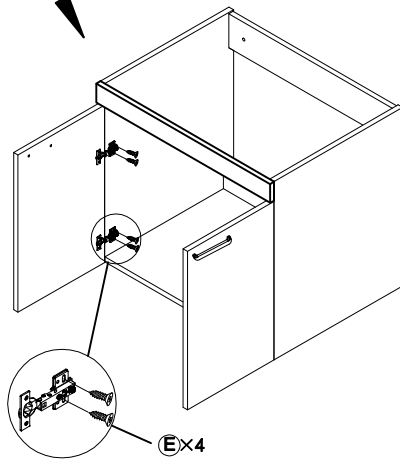

E × 4

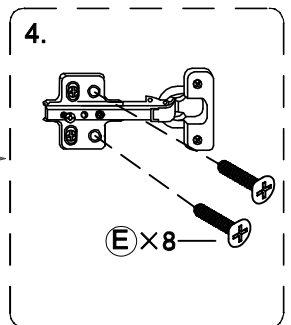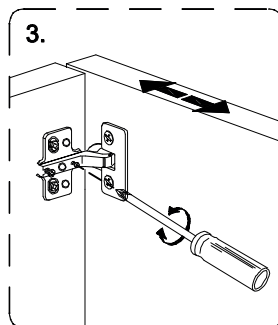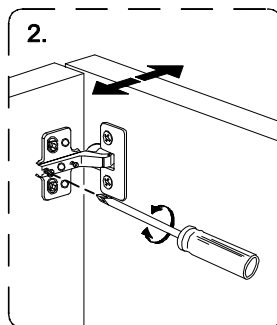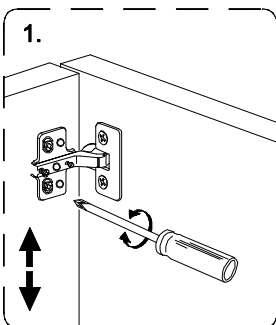

E × 8



5

5


F × 4





E × 16

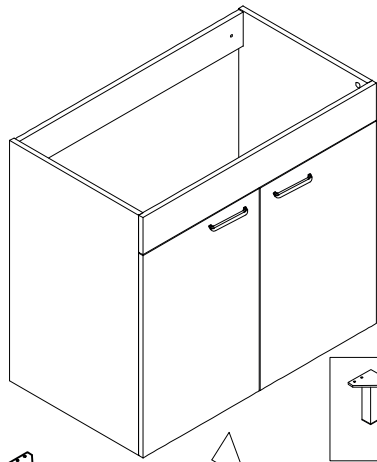

F × 4



E × 4

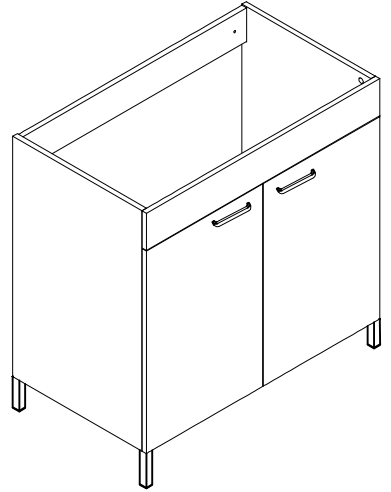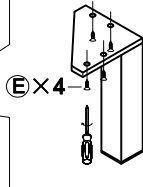

6



Ø10mm



G × 2




Ø10x42mm

H × 2



M6x60mm

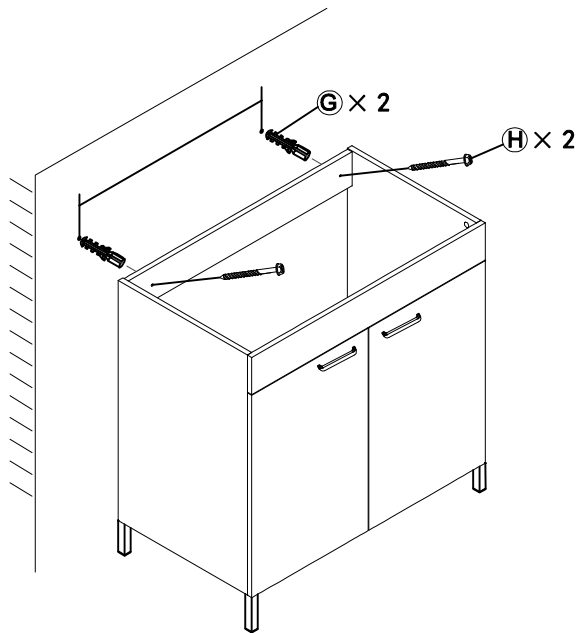

7

K × 2



Ø8x35mm

L × 2



M5x50mm

